



# CANISTER SETUP & TROUBLESHOOTING GUIDE

www.quinglobal.com | twitter.com/quinglobaluk technicalhelp@quinglobal.com | +44 (0) 845 381 2233



### STEP 1.

Screw the larger hose nut to the gun thread (clockwise) and fully tighten with a 22mm spanner. Check hose is securely attached.

### STEP 2.

Insert the spray tip into the tip retaining nut and screw onto the end of gun using a 22mm spanner. Ensure spray tip is in vertical/ upright position.

### STEP 3.

Screw the smaller hose nut to the canister valve (clockwise) and fully tighten with a 15mm spanner. Check the hose is securely attached.

### STEP 4.

Turn the canister valve anti-clockwise until fully open. Check connections for leaks - if any occur, tighten connections. DO NOT TURN THE CANISTER VALVE OFF UNTIL THE CANISTER IS EMPTY (this is to prevent adhesive curing in the hose and gun).




## STEP 5.


On initial use, or if canister has been standing for over 12 hrs, the hose and gun may require a purge. Pull the trigger and adjust flow by turning adjustment screw at the back of the gun (anticlockwise to open and clockwise to close). Dispense and discard adhesive until a consistent spray pattern is achieved.

**CANISTER SETUP** 










- CANISTER CHANGEOVER 3
- CANISTER DISPOSAL 4
- GUN AND HOSE TROUBLESHOOTING 5-10
- CANISTER TROUBLESHOOTING 11-12
- 13-14 CONTACT US



#### STEP 1.

Turn the canister valve (clockwise) until fully closed. Pull the trigger on the gun and hold until there is no more pressure in the line to expel residual pressure (may take up to 20 Seconds).

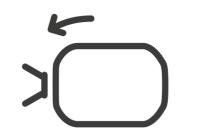


### STEP 1.

Lay the empty canister on its side with the valve pointing AWAY from everyone, and well away from sources of ignition.


#### STEP 2.

Open the canister valve (anti-clockwise) and release any residual pressure.



# STEP 2.

Unscrew the hose nut with a 15mm spanner and disconnect the hose from the empty canister (move to next page for canister disposal).

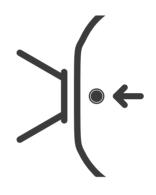

### STEP 3.

STEP 4.


restrictions).

Stand canister upright. Use a hammer and brass punch or other non-sparking instrument to puncture the friable disc.

As long as the user is able to accept responsibility for

de-pressurising the canister, it can be disposed of as per

your normal scrap metal disposal (subject to local waste



## STEP 3.

Connect the hose and gun to the new canister (go to Step 3 of preparation and follow the process through to Step 5). If you are not transferring the hose and gun to a new canister you will need to clean it to ensure it can be used again on future jobs. Consult product TDS and MSDS, for correct cleaner.

#### **IMPORTANT NOTE:**

- This process should be followed through immediately, to stop the gun and hose blocking and becoming unusable.
- Safety glasses and gloves must be put on before starting the disposal process.
- Tip should be wiped after every use with wire brush and appropriate cleaner.


#### **IMPORTANT NOTE:**

- This process applies to our 22ltr canisters only.
- For disposal of 110ltr intermediates please contact your distributor.

# CANISTER CHANGEOVER

# CANISTER DISPOSAL

GUN, HOSE & CANISTER TROUBLESHOOTING





TIP CONNECTION LEAKING Remove nozzle to reveal flat resting plate.




STEP 2 Tighten flat resting plate with 14mm spanner.



STEP 3

Clean the flat resting plate with wire brush. Then re-attached the nozzle (go to step 2 of canister setup and follow the process to step 4)





GUN LOCKED ON SPRAY

Ensure the trigger retention nut (3.3) is in the correct position against the leaver bracket.



STEP 2 Not threaded forward against the seal nut.







HOSE CONNECTION LEAKING Tighten nut with a 22mm spanner.



STEP 2 Hose should have no wobble, if so it is too loose. Make sure not to cross thread as this can cause damage.

# GUN AND HOSE TROUBLESHOOTING

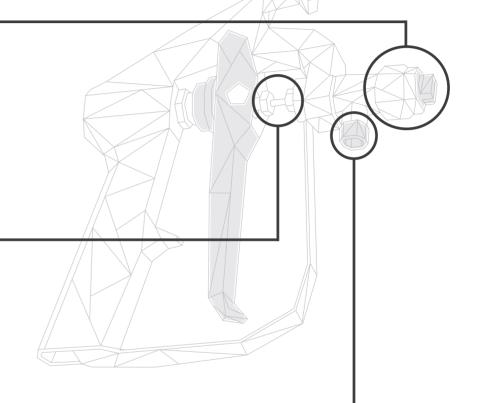

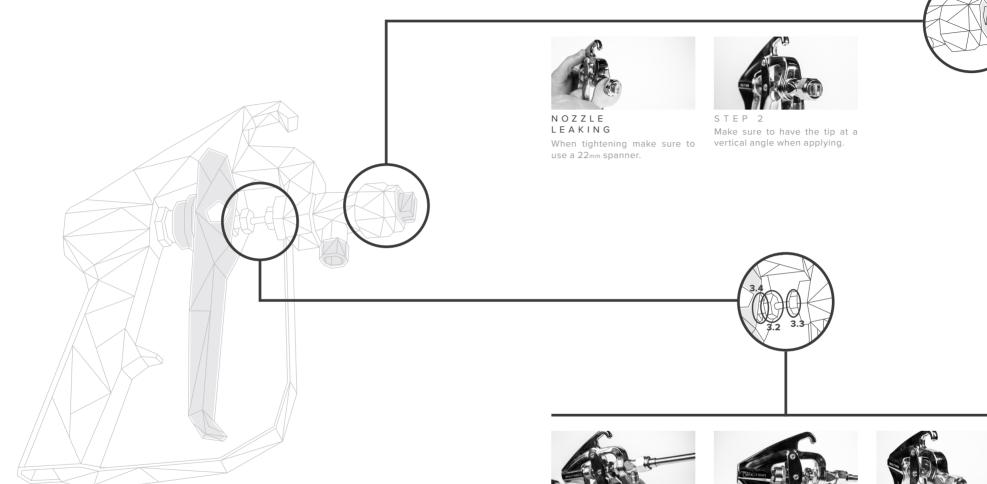

# **GUN AND HOSE** TROUBLESHOOTING



LEAKING FROM NEEDLE SHAFT Loosen nut (3.2) with a 10mm spanner.




Tighten nut (3.3) with a 9mm spanner. While tightening make sure the leaver handle still has movement.



STEP 3

Then reitghten (3.2). Make sure not to over tighten or (3.4) will be pointing up, stopping leaver movement.



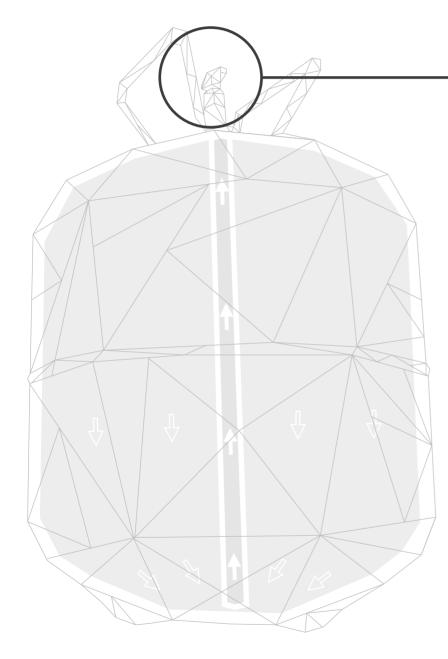



LEAKING Make sure the hose is tightly attached

and make sure not to cross thread as this can damage the canister valve.



STEP 2 Turn handle on and off. If leaking continues. **Contact your distributor.** 



# CANISTER TROUBLESHOOTING



Unit 1, Ruthvenfield Avenue Inveralmond Industrial Estate Perth, United Kingdom PH1 3WB www.quinglobal.com technicalhelp.uk@quinglobal.com customerservices.uk@quinglobal.com +44 (0) 845 381 2233



@QUINGLOBALUK

# CONTACT US

Copyright © 2019 by Quin Global (UK) Ltd All rights reserved. This publication or any portion thereof may not be reproduced or used in any mann whatsoever without the express written permission of the publisher. Printed in the UK. Icons by Agni and Andrejs Kirma from the Noun Project.

#### GUARANTEE

Before using the product, the user should carry out any necessary tests in order to ensure that the product is suitable for the intended application. Moreover, all users should contact the seller or the manufacturer of the product for additional technical information concerning its use if they think that the information in their possession needs to be clarified in any way, whether for normal use or a specific application of our product. Our guarantee applies within the context of the statutory regulations and provisions in force, current professional standards and in accordance with the stipulations set out in our general sales conditions. The information detailed in the present technical data sheet is given by way of indication and is not exhaustive. The same applies to any information provided verbally by telephone to any prospective or existing customer.